

☐ | *fenecon/en/fems/*

FEMS App Manual Charging and Discharging

Version:2026.7.1

Table of Contents

1. How to use the FEMS App Manual Charging and Discharging 2

2. Contact us 3

3. Directories 4

 3.1. List of illustrations 4

1. How to use the FEMS App Manual Charging and Discharging

1. How to use the FEMS App Manual Charging and Discharging

Launch the FENECON Online Monitoring.

In FEMS, navigate to the *Storage System* chip in the side menu and click or tap on it. This will open a list of all chips available for your system:

 **Storage System**

 **Manual Charging**

 Info

^

^

Select the *Manual Charging* or *Manual Discharging* chip. This will take you to the main window of FEMS App Manual Charging and Discharging.

There are two user interfaces here:

Manual Charging

State

ON OFF

Charge/Discharge

Power

10000 W

1. **ON**  enables manual charging or discharging.

Discharge

Charge

Discharge

Discharge

10000 W

Use the drop-down menu to select whether you want to charge or discharge the electrical energy storage system.

Enter the desired power in watts below. Depending on your view, the power may currently be displayed in kW.



The FEMS App Manual Charging and Discharging is currently being updated.

ON

OFF

2. **OFF**  turns off the controller.

3. If you have made any changes to the settings, you must confirm them using . Only then will the changes take effect.

2. Contact us

For support, please contact:

FENECON GmbH
Gewerbepark 6
94547 Iggensbach

Phone — Service: +49 (0) 9903 6280 0

E-mail — Service: service@fenecon.de

3. Directories

3. Directories

3.1. List of illustrations