

FEMS App my-PV Read Access

Version:2025.7.1

Table of Contents

1. Introduction	2
2. Installing the app	2
2.1. Enter the my-PV AC•Thor-9s-IP	2
2.1.1. IP from the my-PV settings	3
3. my-PV settings	4
4. Contact us	6

1. Introduction



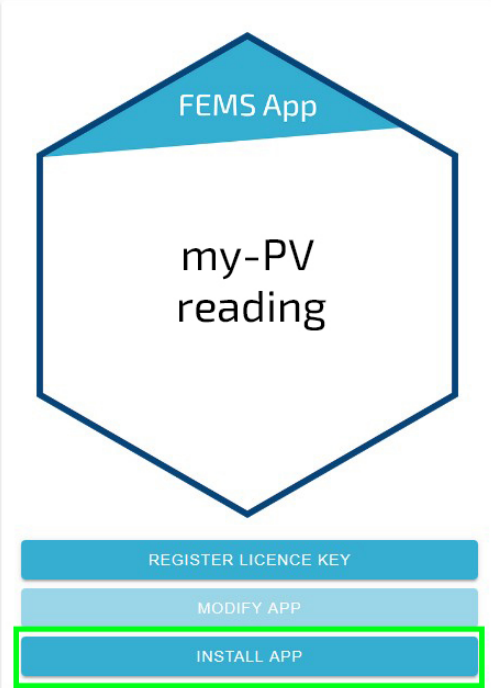
1. Introduction

Dear customer,

Thank you for choosing the "FEMS App my-PV Read Access". You are welcome to send us your suggestions so that we can further improve the quality of our products.

2. Installing the app

- Use these instructions to integrate the my-PV products AC•Thor 9s or AC ELWA 2 into FEMS.
- The exact procedure for installing an FEMS App can be found [here](#).
- Start in the FEMS Online Monitoring.

		<p>1. Select the FEMS App my-PV Read Access in the FEMS App Center under the "Power-to-Heat" category.</p>
		<p>2. Click on Install app.</p>

2.1. Enter the my-PV AC•Thor-9s-IP

The IP address of the my-PV AC•Thor 9s or AC ELWA 2 must be entered during installation.

my-PV AC•Thor 9s read only

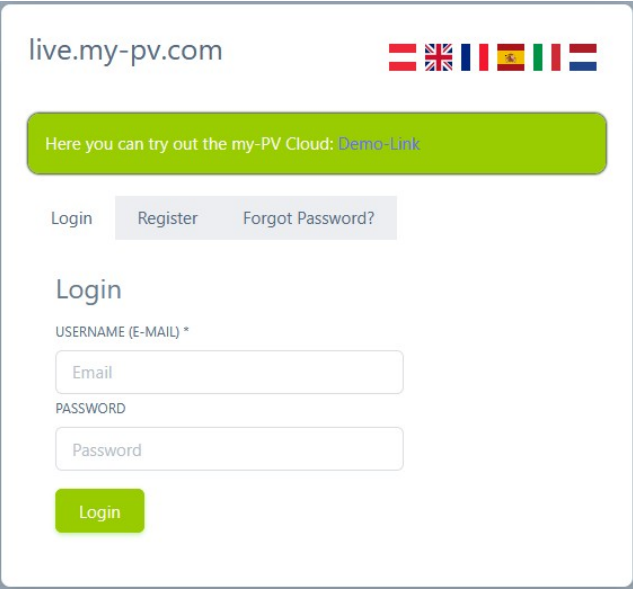
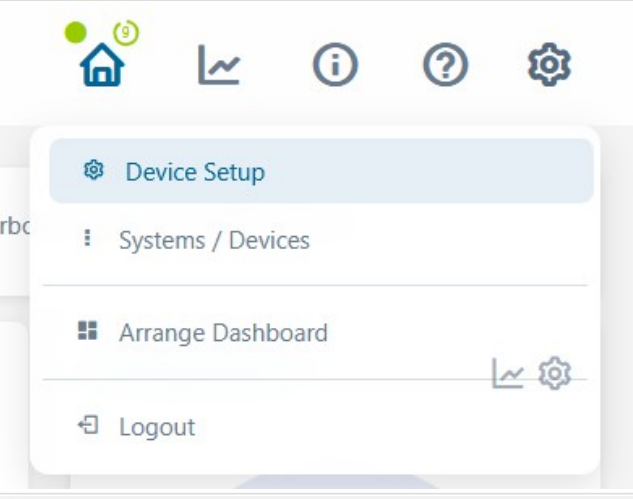
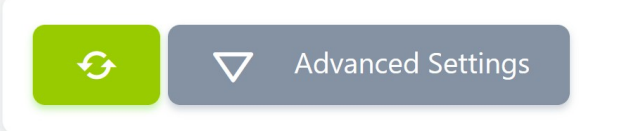
Alias*	my-PV AC•Thor 9s read only
IP-Address*	192.168.178.152

INSTALL APP



The IP can be found in the my-PV-IP settings (see below) or the settings of your router.

2.1.1. IP from the my-PV settings

	<p>1. Log into the my-PV web interface with your access data.</p>
	<p>2. Click on the cogwheel symbol in the top right-hand corner.</p> <p>3. Click on Device settings.</p>
	<p>4. Then click on Advanced settings.</p>
<p>5. Then open the IP settings menu:</p>	

3. my-PV settings

IP Settings

MAC address

Current IP address 192.168.178.152

Current subnet mask 255.255.255.0

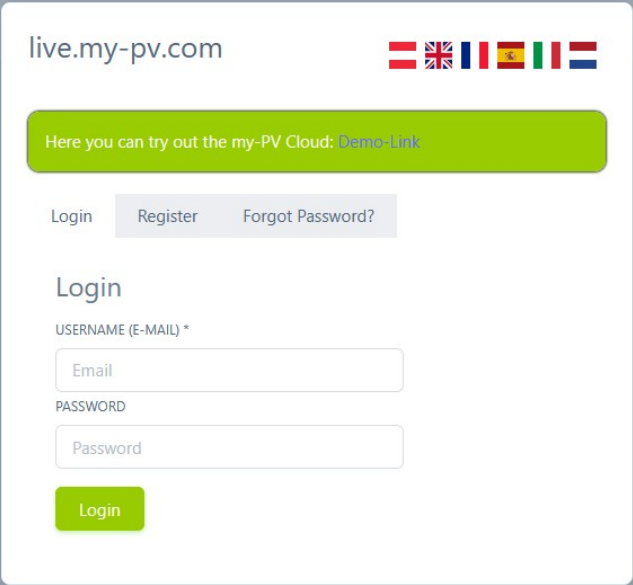
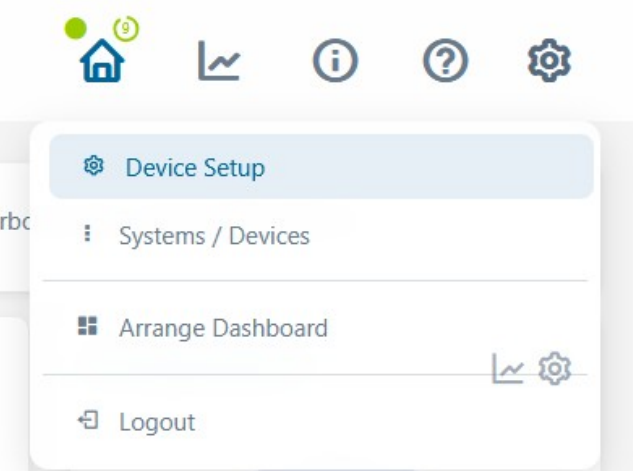
Current gateway 192.168.178.1

Current DNS 192.168.178.1

DHCP-Mode DHCP Static IP

ⓘ Use static IP only if you are familiar with network administration.

3. my-PV settings

 <p>The screenshot shows the login page for live.my-pv.com. It includes a language selection bar with flags for Denmark, UK, France, Spain, and Germany. A green banner offers a 'Demo-Link'. Below are links for 'Login', 'Register', and 'Forgot Password?'. The login form has fields for 'Email' and 'Password', and a green 'Login' button.</p>	<p>1. Log into the my-PV web interface with your access data.</p>
 <p>The screenshot shows a dashboard with a top navigation bar containing icons for home, trends, information, help, and settings. A settings menu is open, listing 'Device Setup', 'Systems / Devices', 'Arrange Dashboard', and 'Logout'.</p>	<p>2. Click on the cogwheel symbol in the top right-hand corner.</p> <p>3. Click on Device settings and then open the Control settings menu.</p>

Control Settings ▼

TIP

For many control types there are separate instructions for the required settings. More information can be found [here](#).

Control type Fenecon FEMS Manual ▼

ⓘ AC-THOR Number >1: only 'Slave' selectable.

Control source IP address 192 168 178 131

Device ID 1

Device port 502

Control state Conn. to Adj.Modbus
P=-21018

Power timeout 10 s

Control target -200 W

ⓘ Negative value means feed-in. Only change this value if you are familiar with the control strategy - read Help for more details.

Interval target value:
 Off
 On

ⓘ Interval target value: If active, a different target value of the control is used in the set time window.

Block start / stop hour 0 0

Save

4. Select **Fenecon FEMS Manual** as *Control type*.

5. Enter the DHCP-assigned **IP address of the FEMS** as the *IP address of the controller*.



The IP address of the FEMS can be found in the network configuration in **Online Monitoring under Settings** or your router settings.



The IP address of the FEMS should be set in the router to **Always assign the same IPv4 address to this network device**.

6. Set **1** for *Device ID* and **502** for *Device port*.

7. Click on **Save**.

The installation is now complete.

4. Contact us

4. Contact us

For support, please contact:

FENECON GmbH
Gewerbepark 6
94547 Iggensbach

Phone — Service: +49 (0) 9903 6280 0

E-mail — Service: service@fenecon.de