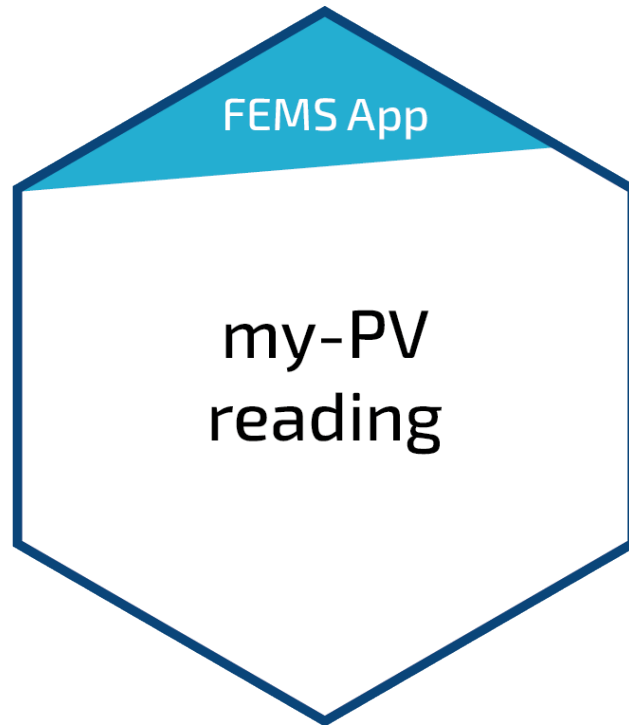




FEMS App my-PV Read Access

Version:2025.7.1

Table of Contents

1. Introduction 2

2. Installing the app 2

 2.1. Enter the my-PV AC•Thor-9s-IP 2

 2.1.1. IP from the my-PV settings 3

3. my-PV settings 4

4. Contact us 6

1. Introduction

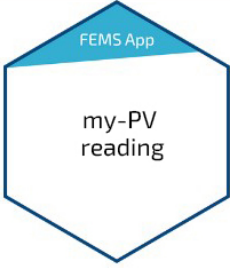
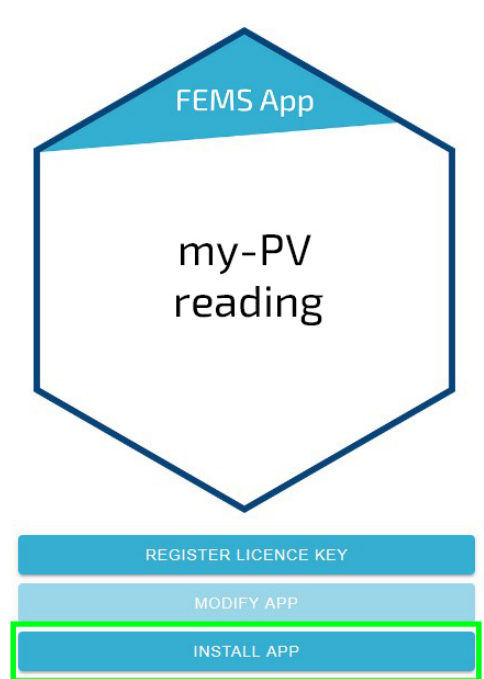
1. Introduction

Dear customer,

Thank you for choosing the "FEMS App my-PV Read Access". You are welcome to send us your suggestions so that we can further improve the quality of our products.

2. Installing the app

- Use these instructions to integrate the my-PV products AC•Thor 9s or AC ELWA 2 into FEMS.
- For general instructions on how to install a FEMS App, cf. [AppCenter documentation](#).
- Start in the FEMS Online Monitoring.

Power-to-Heat	my-PV AC•Thor 9s read only 	1. Select the FEMS App my-PV Read Access in the FEMS App Center under the "Power-to-Heat" category.
		2. Click on Install app.

2.1. Enter the my-PV AC•Thor-9s-IP

The IP address of the my-PV AC•Thor 9s or AC ELWA 2 must be entered during installation.



The IP can be found in the my-PV-IP settings (see below) or the settings of your router.

2.1.1. IP from the my-PV settings

1. Log into the [my-PV web interface](#) with your access data.

2. Click on the **cogwheel symbol** in the top right-hand corner.
3. Click on **Device settings**.

5. Then open the **IP settings** menu:

3. my-PV settings

IP Settings

MAC address

Current IP address

192.168.178.152

Current subnet mask

255.255.255.0

Current gateway

192.168.178.1

Current DNS

192.168.178.1

DHCP-Mode

☒ DHCP

☐ Static IP

ⓘ Use static IP only if you are familiar with network administration.

Save

3. my-PV settings

live.my-pv.com



Here you can try out the my-PV Cloud: [Demo-Link](#)

Login

Register

Forgot Password?

Login

USERNAME (E-MAIL) *

Email

PASSWORD

Password

Login



 Device Setup

 Systems / Devices

 Arrange Dashboard

 Logout

1. Log into the [my-PV web interface](#) with your access data.

2. Click on the **cogwheel symbol** in the top right-hand corner.

3. Click on **Device settings** and then open the **Control settings** menu.

Control Settings

 **TIP**
For many control types there are separate instructions for the required settings.
More information can be found [here](#).

Control type: Fenecon FEMS Manual
① AC-THOR Number >1: only 'Slave' selectable.
Control source IP address: 192 168 178 131
Device ID: 1
Device port: 502
Control state: Conn. to Adj. Modbus P=-21018
Power timeout: 10 s
Control target: -200 W
① Negative value means feed-in. Only change this value if you are familiar with the control strategy - read Help for more details.
Interval target value: ☒ Off ☐ On
① Interval target value: If active, a different target value of the control is used in the set time window.
Block start / stop hour: 0 0
Save

4. Select **Fenecon FEMS Manual** as *Control type*.

5. Enter the DHCP-assigned **IP address of the FEMS** as the *IP address of the controller*.



The IP address of the FEMS can be found in the network configuration in **Online Monitoring under Settings** or your router settings.



The IP address of the FEMS should be set in the router to **Always assign the same IPv4 address to this network device**.

6. Set **1** for *Device ID* and **502** for *Device port*.

7. Click on **Save**.

The installation is now complete.

4. Contact us

4. Contact us

For support, please contact:

FENECON GmbH
Gewerbepark 6
94547 Iggensbach

Phone — Service: +49 (0) 9903 6280 0

E-mail — Service: service@fenecon.de