

Installation und Zugang — FENECON App

Download for mobile devices

FENECON app for Android/iOS

The FENECON app is available to download free of charge for smartphones and tablets.

Open the camera app of your device and scan the corresponding QR code:

Android	Apple iOS
	

Table 1. QR codes to download the FENECON app

You will be redirected to the respective download page.

Alternatively, the app can also be downloaded from the respective app store.

- [Google Play Store \[external link\]](#) for Android
- [App Store \[external link\]](#) for Apple
 1. Search for FENECON.
 2. Tap on "Install".

[arrow right] Nach erfolgreicher Installation können Sie mit Hilfe Ihrer Zugangsdaten auf das Monitoring zugreifen.

TIP

The FENECON BETA App for Android smartphones gives you the opportunity to test and evaluate new app features before the official release.

Click [here](#) to download:

FENECON app for Android/iOS

- Go to the link: [Google Play Store \[external link\]](#) and search for "Beta App FENECON," then install it.

Access via web browser

Via FENECON portal

In addition to our app for Android and iOS, you can also access FENECON Online Monitoring via your browser:

Go to [FENECON Website \[external link\]](#) and click on the yellow "FEMS-Login" button in the upper right corner to log in with your login data. You will then be redirected to the monitoring.

TIP Alternatively, you can also use [this link \[external link\]](#) to log in directly.

TIP Create a shortcut to the login page on your desktop for faster access. This is also possible on mobile devices.

Offline/local access

Monitoring can also be used purely locally ("offline operation"). This form of access is useful, for example, in the event of an internet failure if the FENECON portal cannot be reached.

Instructions — Local access

To do this, enter the IP address of the FEMS in the browser. By default, the FEMS automatically obtains an IP address via DHCP. You can view this via the user interface of your router.


TIP The prerequisite for using local monitoring is that the respective device (e. g. notebook, PC, smartphone) and your FEMS share the same network.

1. First, compound the laptop with the LAN port of the FEMS box.




Offline/local access


2. Under Windows: Open the **Control Panel** and then select **Network and Internet**.

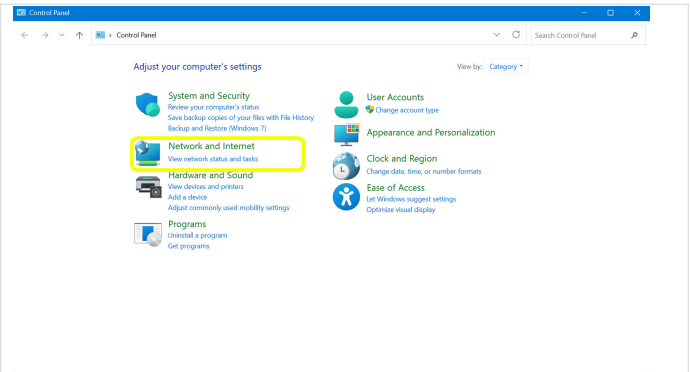


3. Then click on **Network and Sharing Center**.

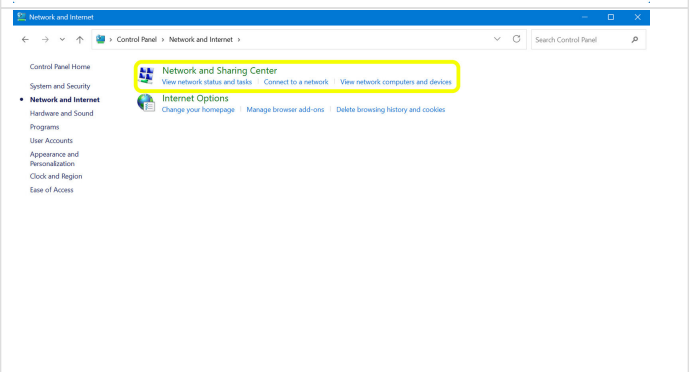

4. Click on **Change adapter settings** in the side menu.

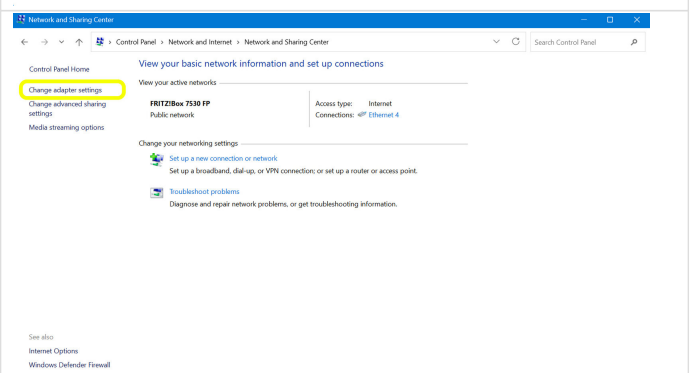

5. Right-click on the corresponding icon to open the properties of this LAN compound and select **IPv4**. The following window opens:

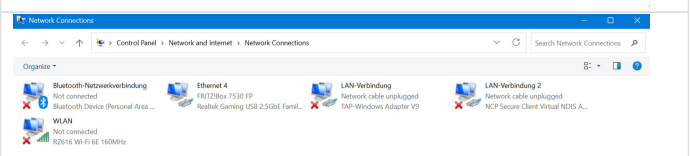

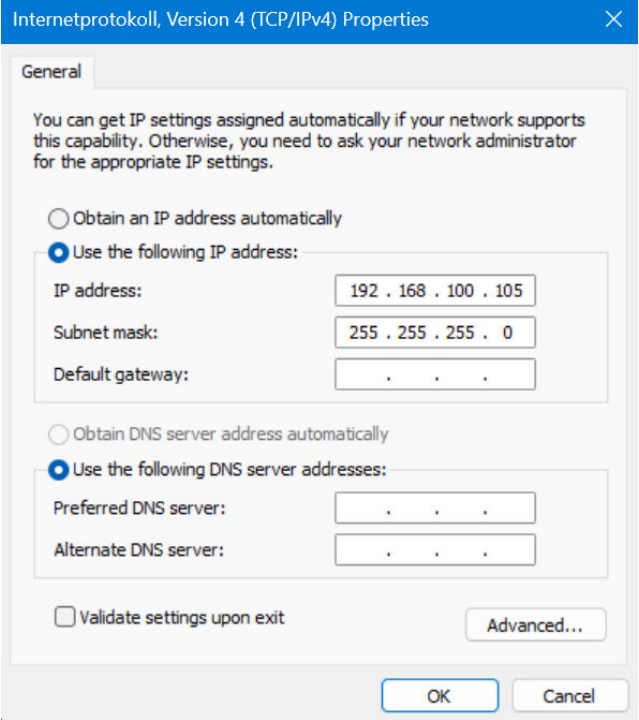
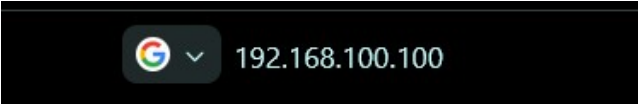
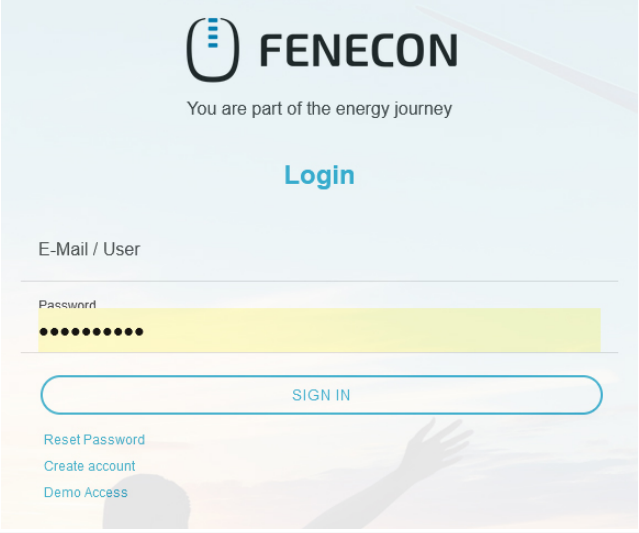
6. At this point, place the laptop in the same number range as the FEMS.	
7. Now open any browser and enter the IP address of the FEMS in the address line.	
8. The following login window should open after the entry. The password for guest access (guest) is stored by default. To be able to use the rights as system owner as via portal access, use owner as password. After entering the password, you can access local monitoring by clicking on the <i>Login</i> button.	
9. The local FENECON Monitoring opens and you can use it to view your system data.	

Table 2. Instructions — Local access via laptop

Firewall and target addresses

The following services are active on the FEMS and require an internet connection to the respective target addresses:

Offline/local access

Service	Destination address(es)	Destination port
DNS	(IP of the + DNS server assigned by DHCP) DNS server assigned by DHCP)	53 (DNS)
Online Monitoring	144.76.42.217 (fenecon.de)	443 (HTTPS)
Time synchronization	144.76.42.217 (fenecon.de)	123 (NTP)
Operating system package updates	144.76.42.217 (deb.fenecon.de)	80 (HTTP)
Remote maintenance	168.119.5.99 (remote-service.fenecon.de)	2222



Table 3. Firewall and target addresses

IMPORTANT

If you have problems with any of these steps, please check the port release of the router or contact service@fenecon.de.

Umschalten auf das neue Design


Auf das neue Design schalten Sie wie folgt um:

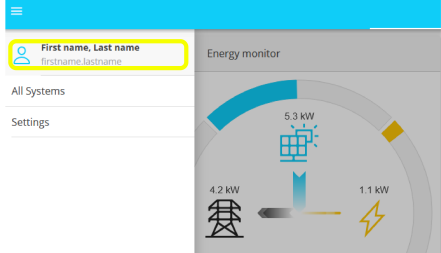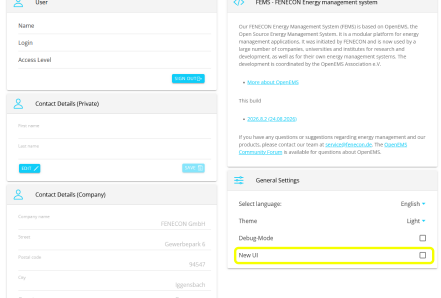1. Navigieren Sie im Seitenmenü des FENECON Online Monitorings zu den Account-Einstellungen (Account-Name).	
2. Setzen Sie unten rechts den Haken [check square] bei <i>Neues UI</i>.	

TIP

- Sofern Sie vom früheren Design wechseln, kann das neue Design jederzeit wieder deaktiviert werden, indem Sie den Haken bei *Neues UI* wieder entfernen.
- Wie andere Account-Einstellungen, z. B. Sprache, ist das neue Design nutzerspezifisch.
- Der finale Wechsel zum neuen Design wird zu einem späteren Zeitpunkt automatisch erfolgen.

 Umschalten auf das neue Design



== Access

After logging in — if several FEMS are assigned to the account — you will see a list of FEMS. If there are more than five FEMS, a search bar also appears so that you can find the desired FEMS more quickly. Clicking on the respective FEMS calls up the monitoring of the system.

Search		
Sorting Ascending FEMS no.	Type	System state
First name, last name	ID: Type: home-30 Logged in as: admin	
First name, last name	ID: Type: Commercial 50-Series Logged in as: admin	
First name, last name	ID: Type: PRO Hybrid 9-10 Logged in as: admin	
First name, last name	ID: Type: PRO Hybrid 9-10 Logged in as: admin	
First name, last name	ID: Type: PRO Hybrid 9-10 Logged in as: admin	
First name, last name	ID: Type: PRO Hybrid 9-10 Logged in as: admin	
First name, last name	ID: Type: Industrial M Logged in as: admin	

Abbildung 1. FEMS listing with multiple assigned FEMS numbers

Ist dem Account nur ein FEMS zugeordnet, findet eine direkte Weiterleitung zum Monitoring-Cockpit statt:


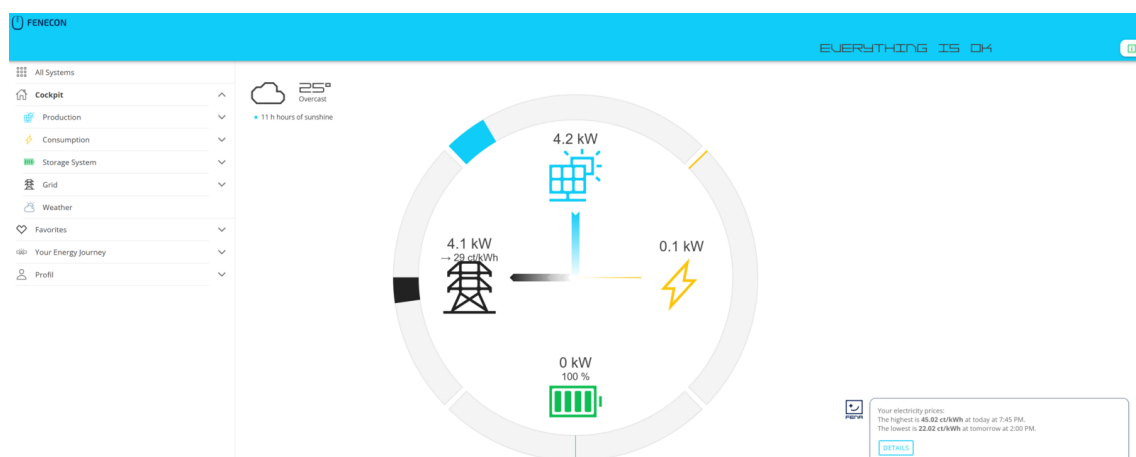 


Abbildung 2. Weiterleitung bei nur einem FEMS — Direkt zum Cockpit

 Umschalten auf das neue Design



== Change or reset password

To change the password, or if the password has been forgotten, it can be reset using the "Reset password" function.

Start at portal.fenecon.de [external link]

1. Click on *Reset password*.

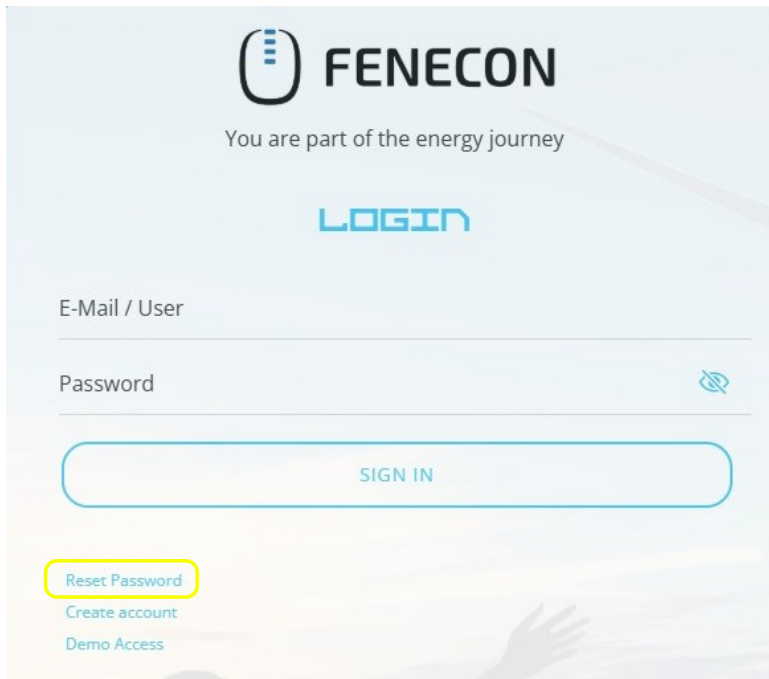


Abbildung 3. Resetting the password

2. You will be redirected to the following page:

Your Email

Reset Password

[Back to Login](#)

Abbildung 4. Reset password — Enter e-mail

3. Enter your account e-mail address here and click on *Confirm*.
4. You will receive a link to reset your password by e-mail.
 - a. If you have not received an e-mail, please also check your SPAM folder.
5. Click on the link in the e-mail to assign a new password.

Anschließend können Sie sich mit dem neuen Passwort einloggen.

== FAQ & Troubleshooting

When the FENECON Energy Management System (FEMS) is offline, the generated data is saved locally on the electrical energy storage system. Once the "Online" status has been restored, this data can be forwarded to Online Monitoring within a short period of time. The duration of the forwarding depends primarily on the amount of data and requires a constant internet connection. We would like to point out that data with a corresponding priority will be forwarded, which includes the data that can be seen in the usual Online Monitoring.

Slight errors may occur when data is forwarded. The reason for this may be that data from external devices has already been forwarded to our system incompletely. Correcting data involves a great deal of effort, as FENECON has no information about potentially incorrect data transmission, on which calculations are based and the extent of the impact cannot be precisely determined. Furthermore, with regard to data transmission and processing, we would like to point out that no calibrated meters have been installed on FENECON devices to date and that even small deviations can occur in split-core current transformer measurements. Therefore, this measured data does not fulfill any control or billing requirements. Therefore, the data on which the individual values of the forwarding are based can neither be identified as incorrect nor corrected accordingly. For this reason, FENECON assumes no responsibility at this point with regard to the processing of a data correction in the forwarding.