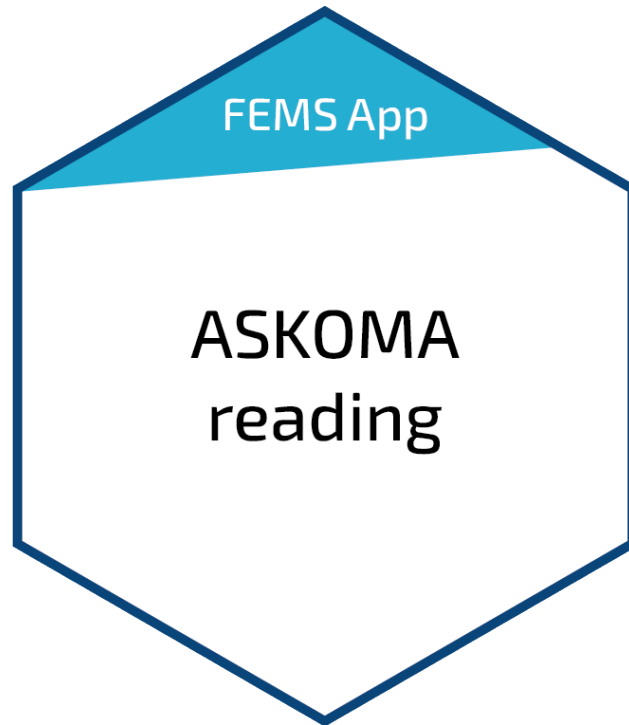




FEMS App ASKOMA

Version:2026.9.2

Table of Contents

1. Introduction 2

2. Installation of the FEMS App ASKOMA 2

 2.1. IP address of the ASKOMA product 2

 2.2. Configuration of the heating element 3

3. How to use the FEMS App ASKOMA 4

 3.1. ASKOMA functionality 4

 3.1.1. ASKOMA Main Window 4

 3.1.2. History 5

 3.1.3. Task scheduling 5

 3.1.4. Settings 6

4. Contact us 8

1. Introduction

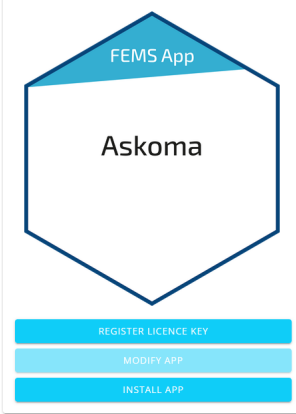
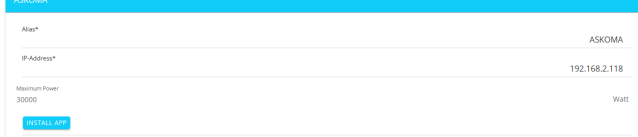
1. Introduction

Dear customer,

Thank you for choosing the "FEMS App ASKOMA". You are welcome to send us your suggestions so that we can further improve the quality of our products.

2. Installation of the FEMS App ASKOMA

- Use these instructions to grant FEMS write access to ASKOMA products.
- For general instructions on how to install a FEMS App, cf. [AppCenter documentation](#).
- Launch the FENECON App.

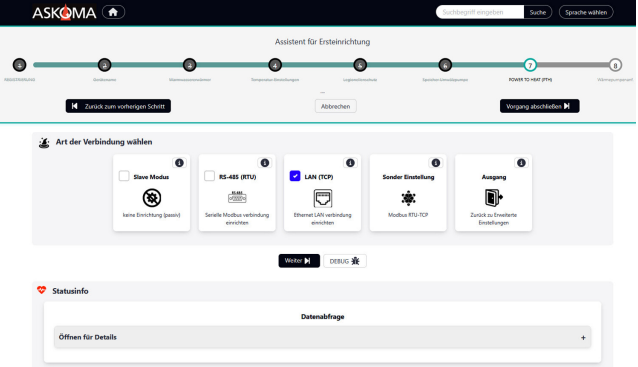
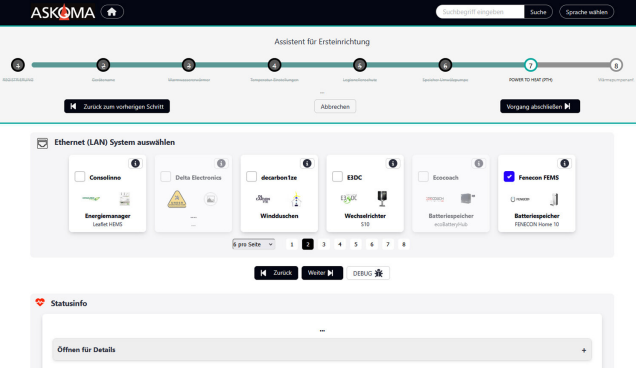
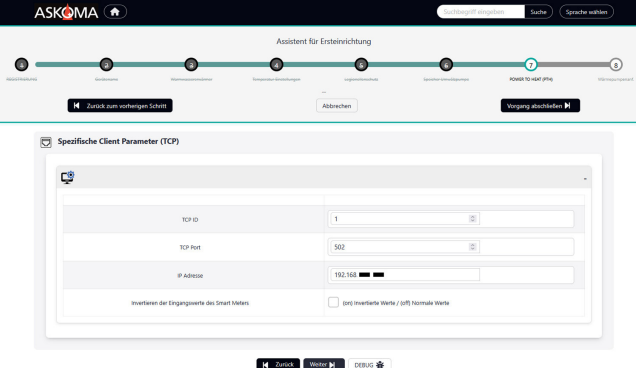
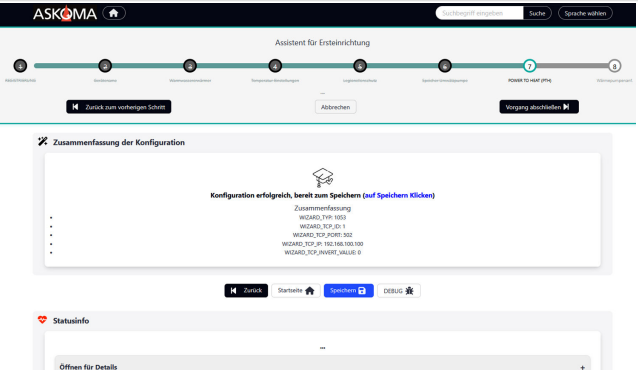
	Select FEMS App ASKOMA in the AppCenter.
	1. The name of the heating element can be specified as an Alias, e. g., ASKOHEAT+ domestic hot water tank. 2. Enter the IP address of the ASKOMA product in the IP Address field. This can be determined using as described here. 3. In addition, you must specify the maximum power rating of the heating element, e. g. 3000 W for the ASKOHEAT+. Complete the installation by clicking [INSTALL APP].

2.1. IP address of the ASKOMA product

Find the IP address of your router's web interface, provided that the router is on the same network as the ASKOMA product.

2.2. Configuration of the heating element

- Follow the ASKOMA operating instructions [ASKOMA HEAT+](#).
- Use the QUICK SETUP.
- As soon as you have reached point 7 (PTH) of the wizard, continue as follows:

	1. Select LAN as the type of compound ☒ and click on Next.
	2. Setzen Sie den Haken bei FENECON FEMS ☒ und klicken Sie auf Weiter.
	3. Enter the number 1 as <i>TCP ID</i>. 4. Enter the number 502 as <i>TCP Port</i>. 5. Enter the DHCP IP address of the FEMS as the <i>IP address</i>. You can find this in the FENECON Online Monitoring by clicking on the burger menu under <i>Settings Network configuration</i>.
	6. Click on Next. 7. The configuration of the ASKOMA heating element is now complete.

3. How to use the FEMS App ASKOMA

The connection to FEMS must now be established.

3. How to use the FEMS App ASKOMA

Once the installation is complete, FEMS App ASKOMA will be available in the side menu of the FENECON app (shown here: desktop view):

 **ASKOMA** 

 History

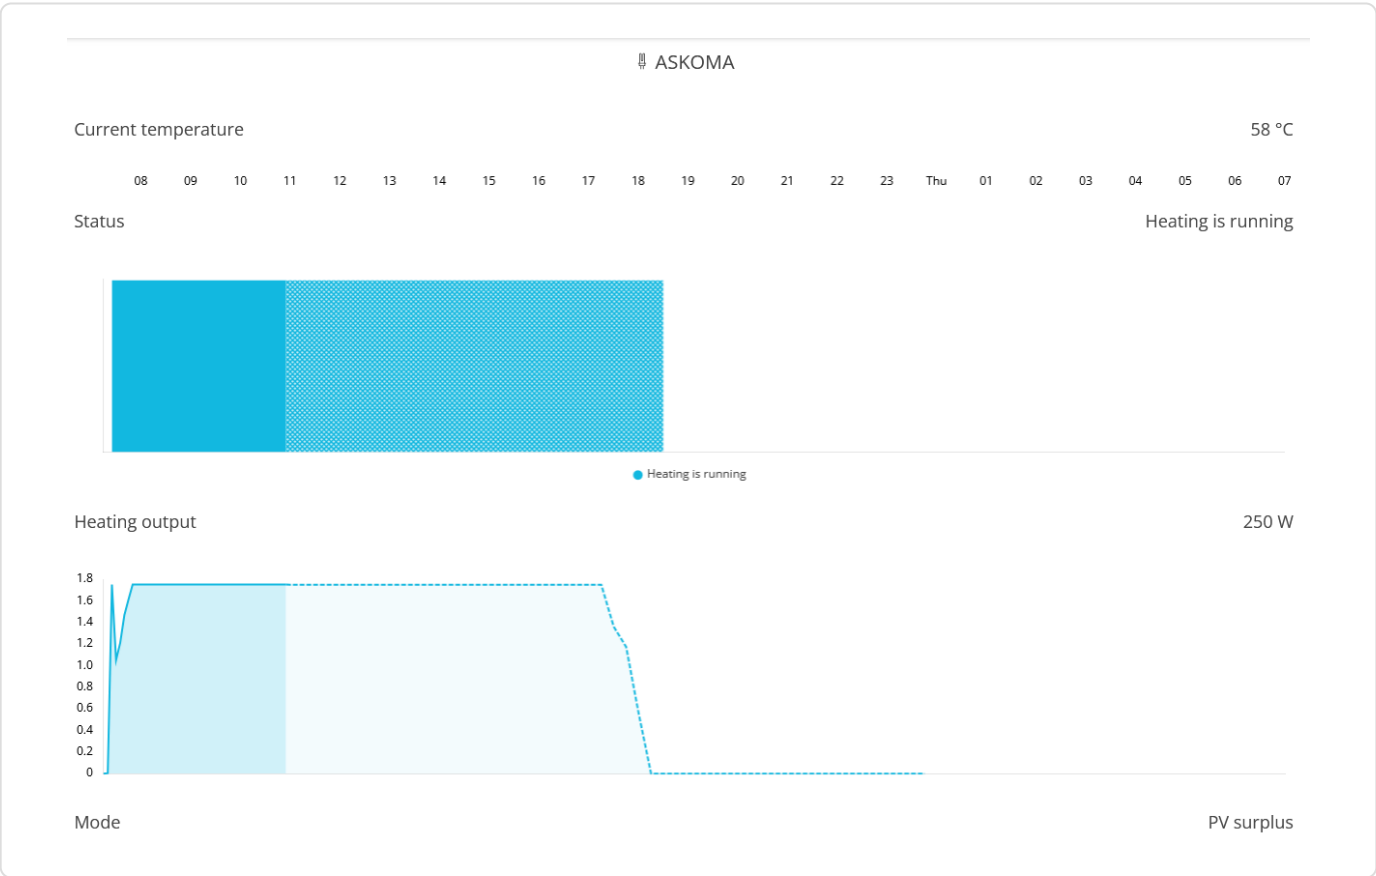
 Schedule

 Settings

3.1. ASKOMA functionality

3.1.1. ASKOMA Main Window

If you click or tap directly on **ASKOMA** in the side menu, the main window will display the current water temperature, the historical trend (4 hours), and the future trend (20 hours) of the water temperature in a graphical representation. The heating output is also displayed.

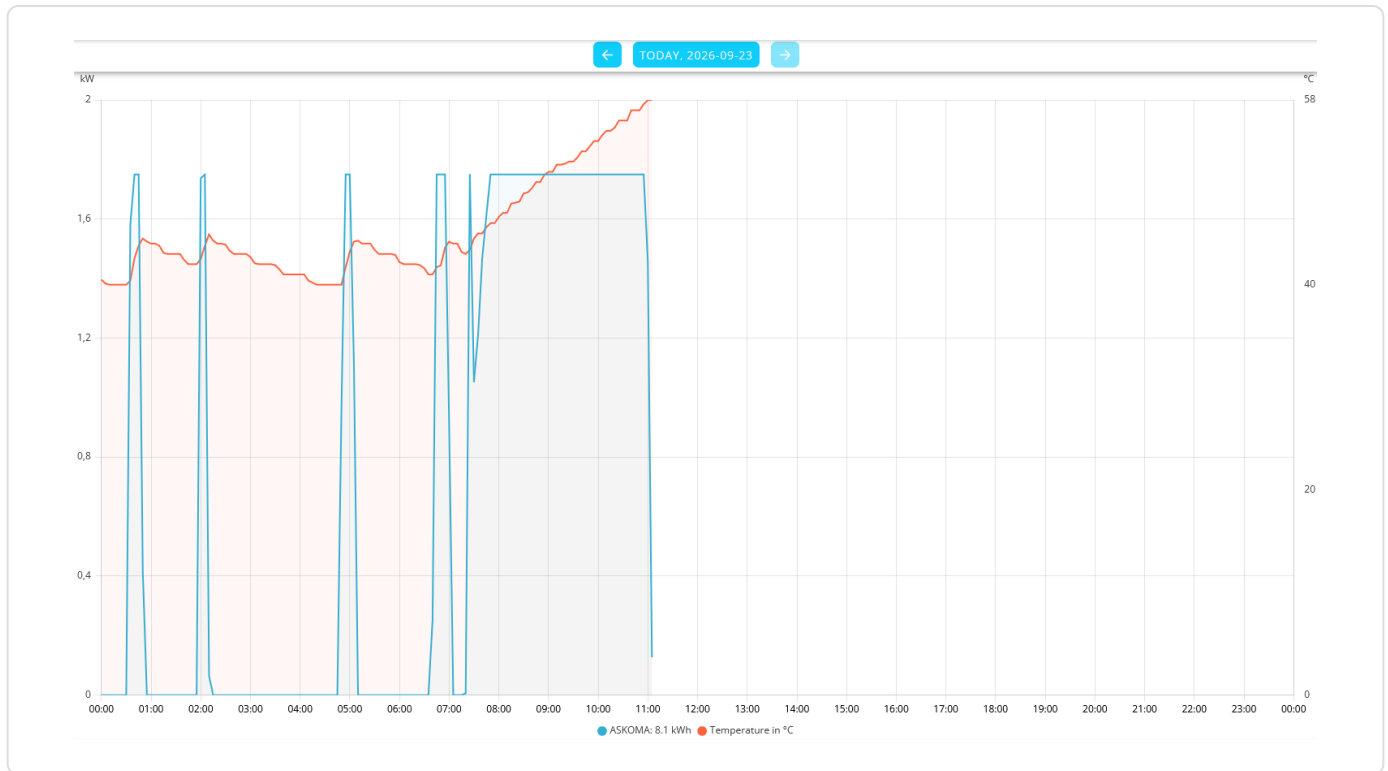


3.1.2. History

Select **History** from the side menu, and the main window will display the historical data for your heating element (water temperature/heating output).



If you use a temperature sensor, its data will also be displayed in the history.



3.1.3. Task scheduling

Using the **Schedule** settings, you can manually specify, with 15-minute precision, how the heating element should operate in the future.

Using **[ADD]**, you can create tasks that override the **Base Mode** of the heating element according to your preferences and within the specified limits:

< Schedule

Heating mode	Fast heat ▾
Repeat	Daily ▾
Start	06:30
End	09:00

+ ACCEPT

Set the desired **Heating Mode**, its repeat interval, and the start and end times.

3.1. ASKOMA functionality

Click [+ ACCEPT] to save the settings and save the task.



The task will be added to your FEMS schedule.

The task is now visible in the main window under **Schedule**:

Heating mode Fast heat

Start	06:30
End	09:00
Repeat	Daily

EDIT

+ ADD

The assignment can be edited or deleted at any time.

3.1.4. Settings

In the side menu, the bottom item is **Settings**. Here, you can set the **Base Mode** for the heating element, which is active outside the time periods defined by the **Schedule**:

ASKOMA



☐
Fast heat

The Askoma heating rod automatically selects the equivalent heating level. The maximum power duration is 10 hours. After that, it makes 1h pause.

☒
PV surplus

Enables even heating of different buffer tanks. Activation happens automatically, perfectly adapted to your excess and available PV energy.

☐
No heating

Description of the **Base Modes**:

Fast heat

The heating element operates at full power to heat the water as quickly as possible. This setting is particularly useful, e. g. when combined with Time-of-Use tariffs during periods of low electricity prices.

PV surplus

In this mode, the PV system's excess production—which would otherwise be subject to grid feed-in—is used for heating.

No heating

The heating element is inactive.

4. Contact us

4. Contact us

For support, please contact:

FENECON GmbH
Gewerbepark 6
94547 Iggenbach

Phone — Service: +49 (0) 9903 6280 0

E-mail — Service: service@fenecon.de