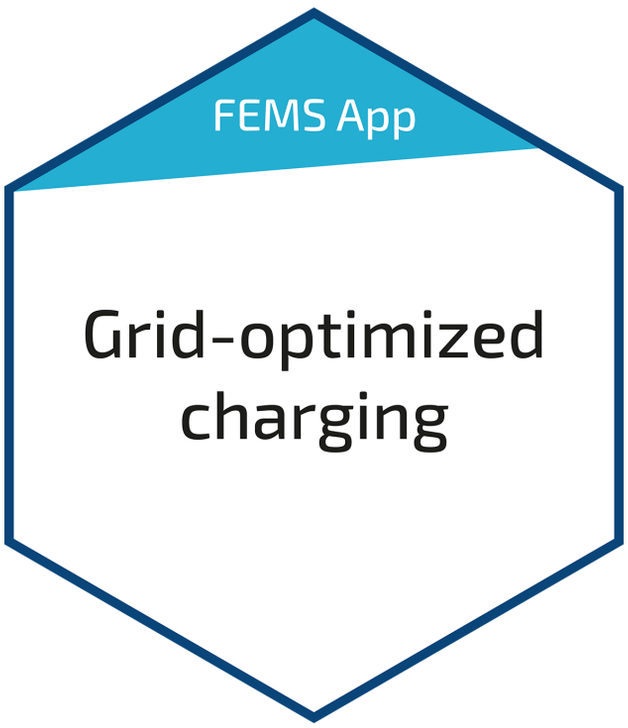


FEMS App Grid-Optimized Charging

Version:2023.4.1

Table of Contents

1. Introduction 2
2. App activation 3
3. FEMS App Grid-Optimized Charging 3
4. Overview 4
5. Extended display 5
6. State of charge of the electrical energy storage 7
7. Willingness to take risks 7
7.1. Low . . . 7
7.2. Medium . . . 8
7.3. High . . . 8
7.4. History . . . 9
8. Contact us 10
9. Directories 11
9.1. List of illustrations . . . 11

1. Introduction

Dear customer,

Thank you for choosing the "FEMS App Grid-Optimized Charging". You are welcome to send us your suggestions so that we can further improve the quality of our products.

2. App activation

If you have purchased a FENECON Home 10 electrical energy storage system from FENECON, the app is already included and pre-installed:

System	FENECON Home 10	FENECON Home 6, 10 & 15	FENECON Home 20 & 30	FENECON Commercial 92
App pre-installed	☑	☑	☑	☑

If you have purchased another electrical energy storage system that does not have the app pre-installed, you will have received a 16-digit license key when you ordered the "FEMS App Grid-Optimized Charging". You can use this license key in the FEMS App Center to install the app.

3. FEMS App Grid-Optimized Charging

The "FEMS App Grid-Optimized Charging" is an advanced version of self-consumption optimization. It uses forecasts of local power generation and power consumption to optimize the charging behaviour throughout the day. This results in a flatter feed-in curve and avoids power losses due to PV curtailment as far as possible.

As soon as the "FEMS App Grid-Optimized Charging" has been activated on your FEMS, you will see this widget in your monitoring:

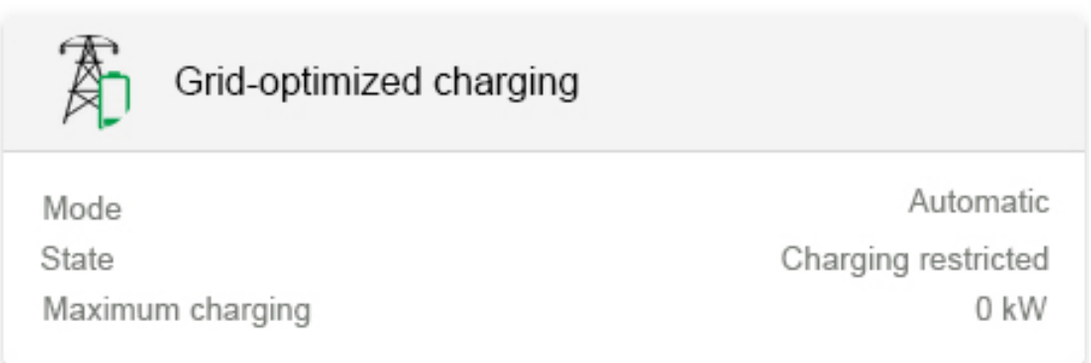


Image 1. Widget — Initial operation

If the app has already been activated for some time, you will see a widget similar to the one below:

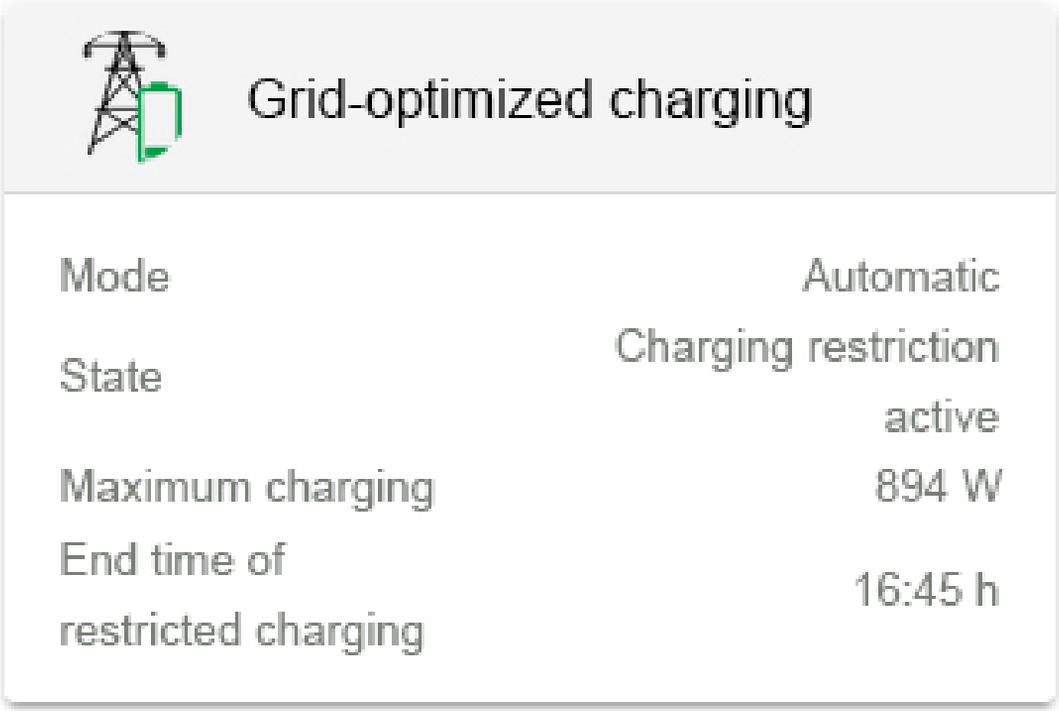


Image 2. Regular operation — Widget

4. Overview

The following information can be viewed in the overview:

- Mode: Indicates the current grid-optimized charging mode:

  Manual

  Automatic

  Off

- Status: Indicates the current status. A distinction is made between the following states:

  Loading limit active

  End time not calculated

  > This condition exists, for example, if the app has been in operation for less than one day (see Widget — Initial operation)

  Feed-in limitation is avoided

  No charging limit active

  No limitation possible (restriction by controls with higher priority).

  End time of limited charging exceeded.

  Electrical energy storage already full

- Maximum charging: Indicates the current maximum charging of the electrical energy storage.
- End time of the restricted charging: Time until the restricted charging should continue.

5. Extended display

Click on the widget to open the detailed view of the FEMS app:

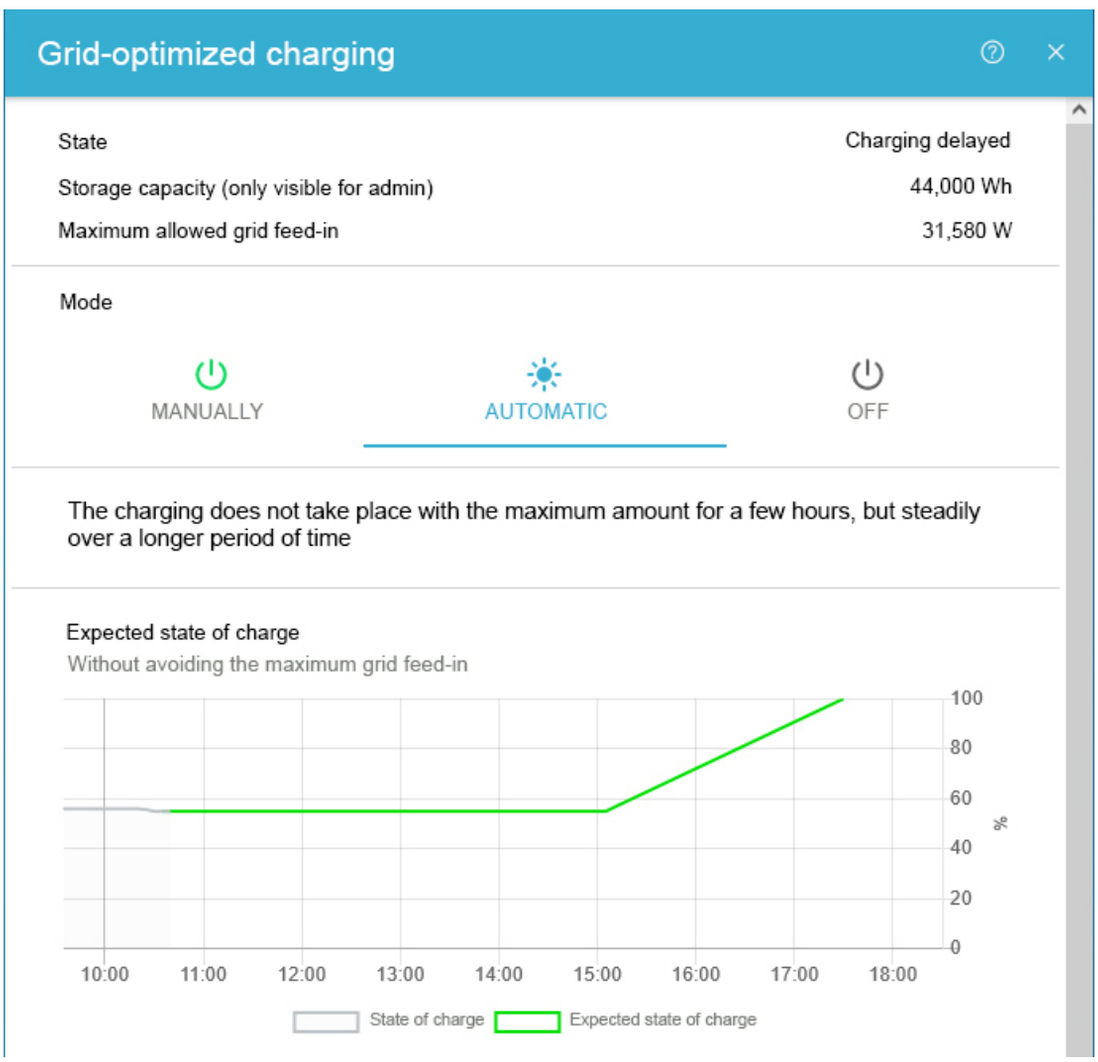


Image 3. Extended display

Further information is provided here.

- Maximum permitted grid feed-in: Maximum power (of the PV system) that may be fed into the grid.

This value is either specified initially when the order is placed or recorded during commissioning. If this value has changed, it can be changed by the installer in this detailed view.

There are three different operating modes:

- **Manual**: The time at which the electrical energy storage should be fully charged must be set manually.

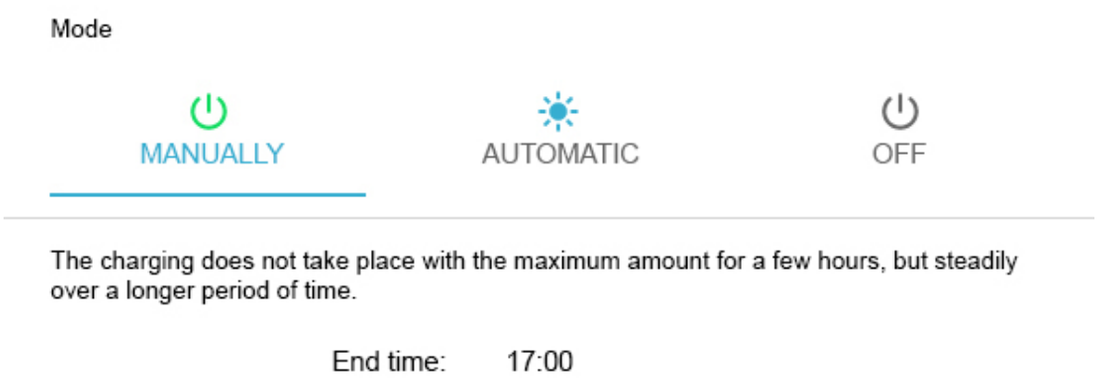


Image 4. Operating mode — Manual

In this case, the default setting of 17:00 was used.

- **Automatic**: The time at which the electrical energy storage should be fully charged is determined by automatic calculation.

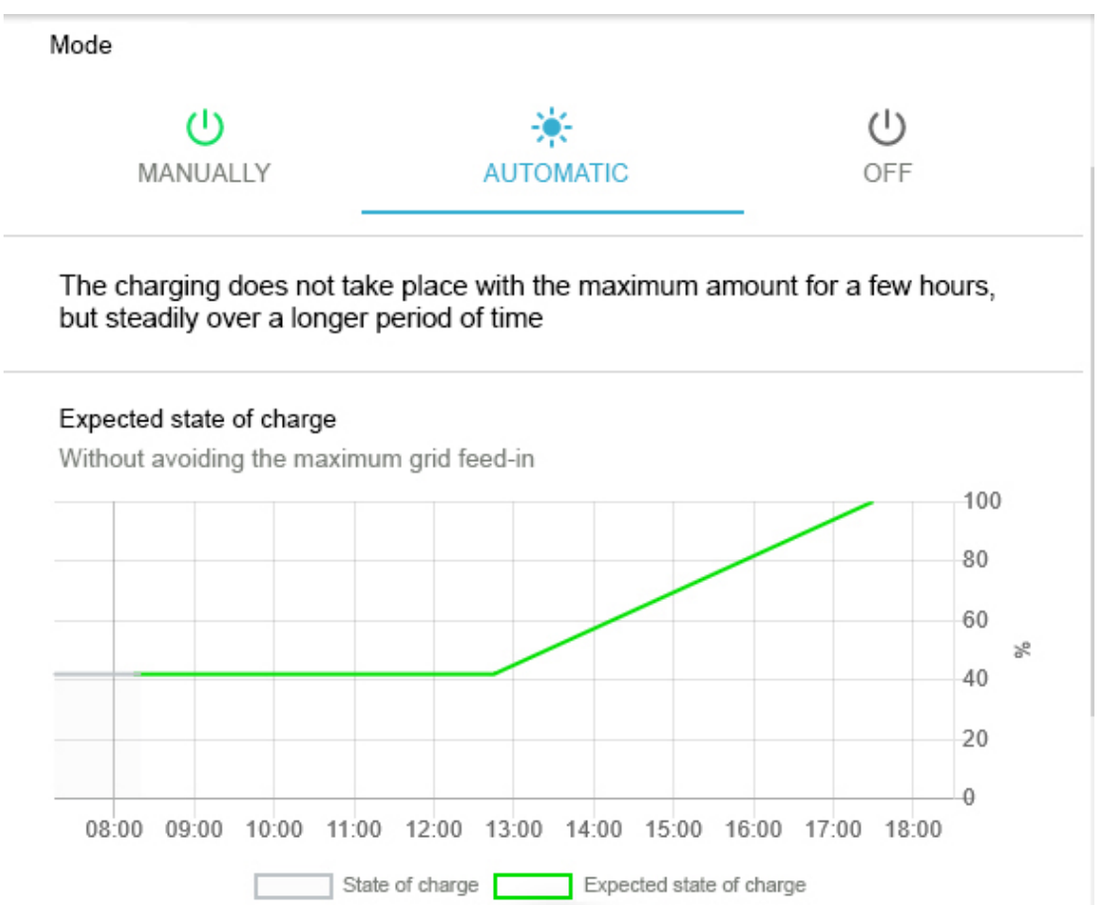


Image 5. Operating mode — Automatic

- *Off: Grid-optimized charging is deactivated. The control of the electrical energy storage switches to self-consumption optimization. The maximum grid feed-in is still taken into account.



Image 6. Operating mode - Off

6. State of charge of the electrical energy storage

In this view, the current and expected State of Charge of the electrical energy storage is displayed over time.

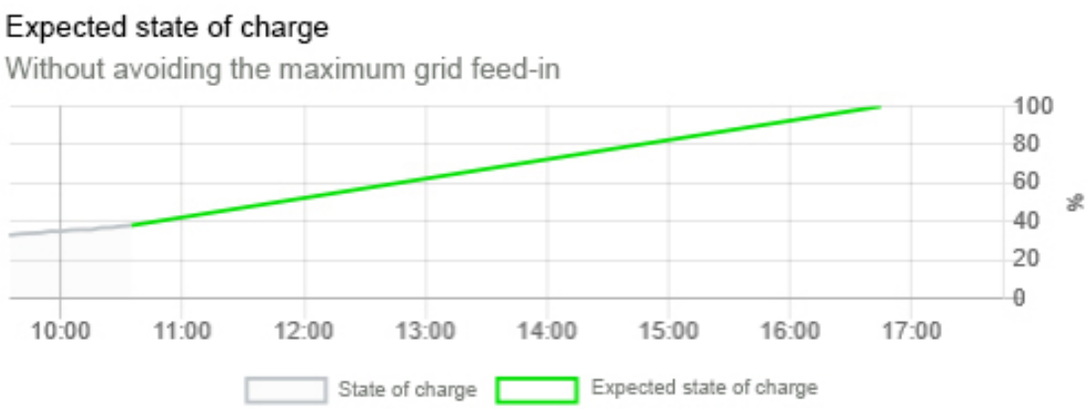


Image 7. State of Charge indicator

7. Willingness to take risks

In this view, you can choose between three different types of readiness to assume risks:

- Low
- Medium
- High



Image 8. Willingness to take risks

7.1. Low

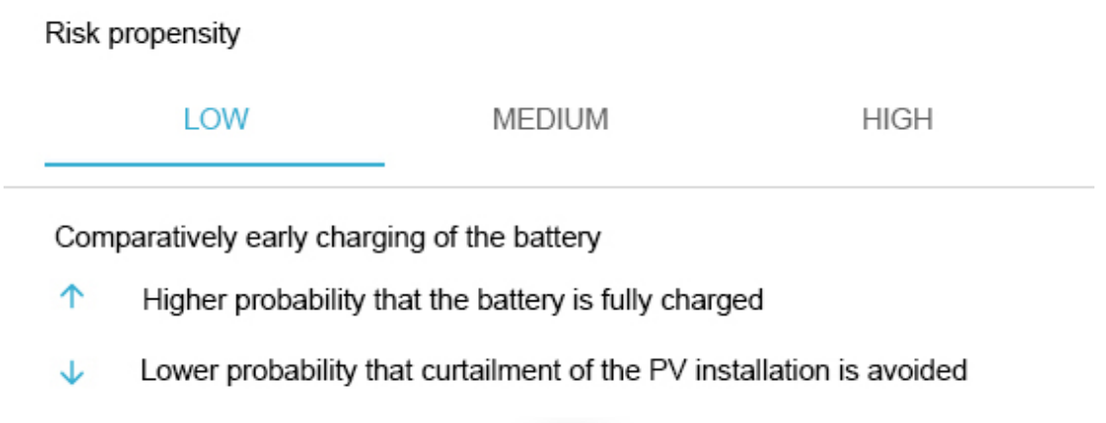


Image 9. Risk-shy

- Very high probability that the electrical energy storage will be fully charged.
- Greater probability that the PV curtailment will take effect because the electrical energy storage system is already fully charged.

7.2. Medium

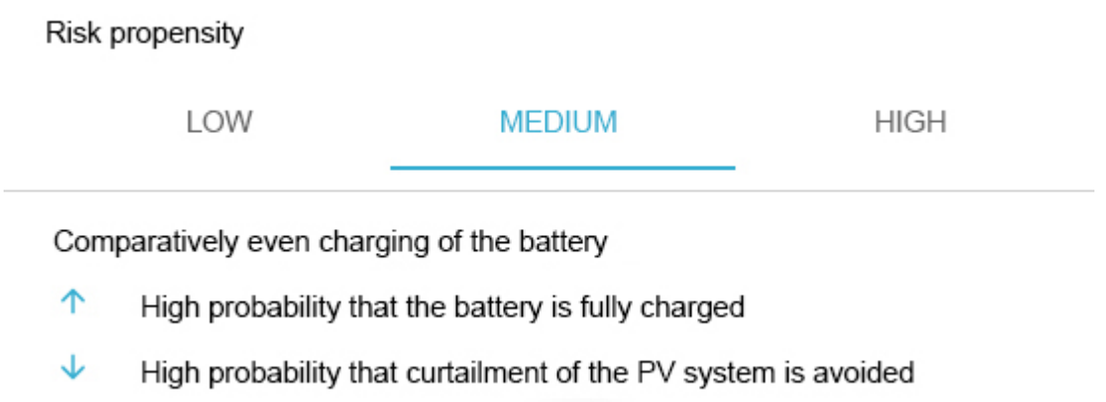


Image 10. Medium level of risk

- High probability that the electrical energy storage will be fully charged.
- Low probability that the PV curtailment will take effect because the electrical energy storage system is already fully charged.

7.3. High

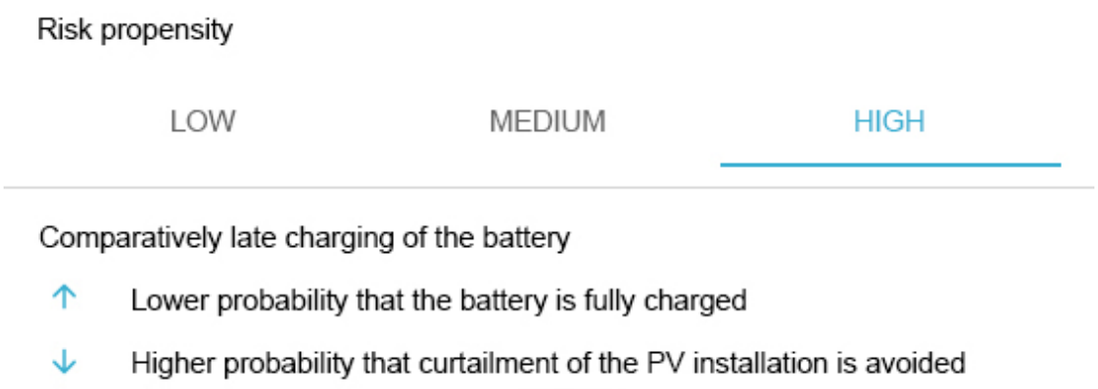


Image 11. High willingness to take risks

- Lower probability that the electrical energy storage will be fully charged.
- Very low probability that the PV curtailment will take effect because the electrical energy storage system is already fully charged.

7.4. History

The "History" tab can be used to view the behavior of Grid-Optimized Charging over time.

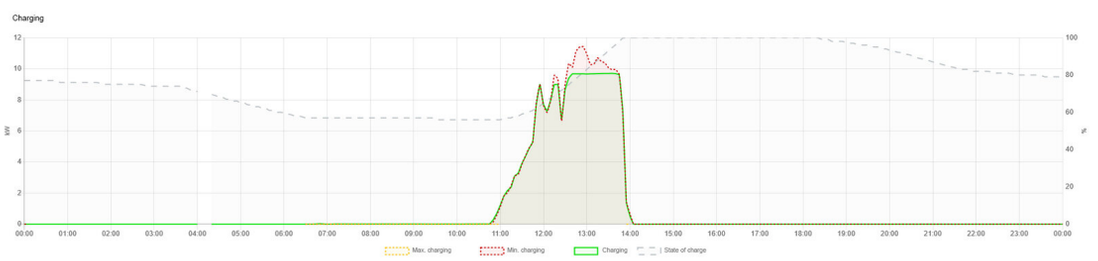


Image 12. History

If the app has only just been put into operation, the historic view will for sure take more time to unfold.

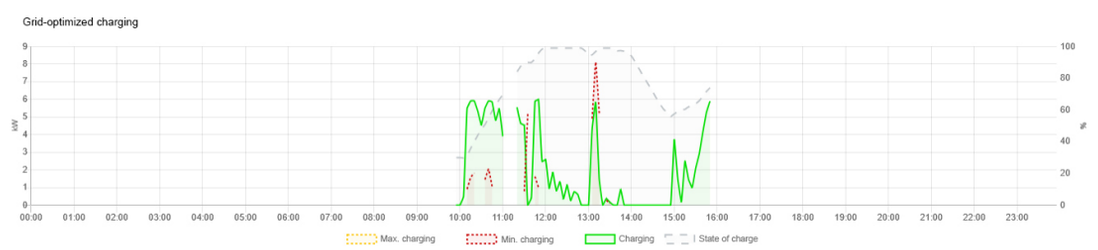


Image 13. History incomplete

8. Contact us

For support, please contact:

FENECON GmbH
Gewerbepark 6
94547 Iggensbach

Phone — Service: +49 (0) 9903 6280 0
E-mail — Service: service@fenecon.de

9. Directories

9.1. List of illustrations

Image 1. Widget — Initial operation
Image 2. Regular operation — Widget
Image 3. Extended display
Image 4. Operating mode — Manual
Image 5. Operating mode — Automatic
Image 6. Operating mode - Off
Image 7. State of Charge indicator
Image 8. Willingness to take risks
Image 9. Risk-shy
Image 10. Medium level of risk
Image 11. High willingness to take risks
Image 12. History
Image 13. History incomplete