FEMS App DC Charging Station

Table of Contents

1. Introduction	2
2. Prerequisites	2
3. Installing the app	2
4. FEMS App DC Charging Station	2
4.1. Why should your wallbox be integrated in FEMS?	2
4.2. Advantages of the FEMS App DC Charging Station	3
4.3. Visualization and configuration in Online Monitoring	3
4.4. FAQ & Troubleshooting	11
4.5. Further information	13
5. Contact	15
6. Directories	16
6.1. List of illustrations	16

1. Introduction

1. Introduction

Dear customer,

Thank you for choosing the "FEMS App DC Charging Station". You are welcome to send us your suggestions so that we can further improve the quality of our products.

2. Prerequisites

A DC charging station supported by FEMS is required to use the "FEMS App DC Charging Station".

Models from the following manufacturers are currently supported:

DC-Ladestation		
IES Synergy	Keywatt 24 kW	
Alpitronic Hypercharger	HYC50 HYC150 HYC300 HYC400	

3. Installing the app

When you ordered the "FEMS App DC Charging Station", you received a 16-digit license key. You can use this license key to redeem the app independently in the FEMS App Center.

Find instructions on how to proceed here.

4. FEMS App DC Charging Station

4.1. Why should your wallbox be integrated in FEMS?

FEMS, the open-source-based energy management system from FENECON, gives you the freedom to design your Energy Journey. Together with manufacturers of wallboxes, heat pumps, heating elements, etc., we are continuously working on further integrations for the FEMS App DC Charging Station.

Compatible wallboxes offer various manufacturer-side advantages that support you on your Energy Journey. New partnerships with other manufacturers are constantly being forged.

FENECON accompanies you step by step on your Energy Journey towards 100% self-sufficiency: For example, owners of a photovoltaic system can use the combination of FENECON electrical energy storage and electric vehicle to charge the solar power they produce themselves instead of feeding it into the grid at low prices.

Use the FEMS App AC Charging Station or FEMS App DC Charging Station to control your wallbox.



Since 01/04/2023 you will receive the FEMS App Multi-Charging-Point Management free of charge from the second charging station or from the second charging point.

4.2. Advantages of the FEMS App DC Charging Station

• Full control over charging processes

Control your wallbox via your FEMS Online Monitoring. Adapt the charging strategy to your respective everyday situation: whether it's an immediate charging start — in MANUAL mode — or intelligently controlled PV surplus charging — in AUTOMATIC mode.

• One-time purchase, no recurring costs

After the one-off purchase, there are no further costs for the app — lifetime updates included.

• OpenEMS Community

ENECON

The software is being developed further in cooperation with universities, institutes and other manufacturers of energy management systems in the global OpenEMS community.

• Energy Journey

We are already thinking about the next steps you might want to take on your personal Energy Journey. That's why we are working on integrating dynamic electricity tariffs for e-mobility, automatic phase switching, etc.

4.3. Visualization and configuration in Online Monitoring

After installing the FEMS App AC charging station or FEMS App DC charging station, you will see the following widget in your live monitoring:

Charging station	
Status	Charging in progress
Energy since starting to charge	7.4 kWh
Mode	Manual
Max. charging power	11.1 kW

Figure 1. Flat widget

The following information is displayed in the widget:

- Status: Shows the current status of the wallbox
 - ° Charging in progress: The electric vehicle is plugged in and charging is in progress
 - $^\circ$ Car charged: The electric vehicle is plugged in and the desired charging status has been achieved
 - ° Ready for charging: The electric vehicle is plugged in and waiting for the charging process to start
 - ° Not ready for charging: The cable is not plugged in correctly

4.3. Visualization and configuration in Online Monitoring

- ° Cable not connected: Electric vehicle is not connected to the wallbox
- Energy since start of charging: Shows the energy charged since the start of charging in [kWh].
- Mode: Shows the current operating mode (see Mode)
- Maximum charging power: Shows the current maximum charging power in [kW]

Consumption	
Charging station Back-up power consumers	10 kW 0 kW
Other consumption	0.1 kW

Figure 2. Consumption widget

Click on the widget to open the detailed view of the FEMS App:

Electric vehicle		₽ 0 ×
Status Charge target Charging power Energy since start of charging		Charging in progress 22,100 W 22,000 W 1,576 Wh
Mode		0
U MANUALLY	-ở:- AUTOMATIC	OFF
Max. charging power.		22,100 W
4,200 W		● 22,100 W

Figure 3. Detail widget

Here you have the option of switching between three operating modes:

Manual

In manual mode, priority is given to drawing electricity from the grid. If energy is available in the FENECON electrical energy storage at the current time, this electricity is used first before electricity is drawn from the grid. Charging takes place with a fixed maximum charging power*. This mode is always useful if the car is to be fully charged as quickly as possible or charged with a defined power.

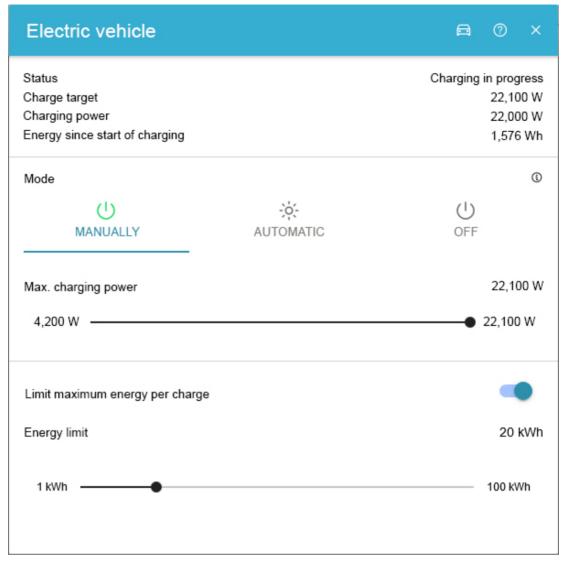


Figure 4. Manual mode

You can also limit the maximum energy per charging process. The energy limit is set using a slider between 1 kWh and 100 kWh. In the example, the amount of energy per charging process was limited to 20 kWh.



We recommend limiting the energy if the EV is only to be charged with a fixed amount of energy (e. g. 20 kWh).

Automatic

In automatic mode, the charging of the EV is dynamically adapted to the surplus electrical energy (e. g. PV surplus). A surplus occurs when there is a positive difference between generation and consumption.



Electric vehicle		⊟ @ ×
Status Charge target Charging power Energy since start of charging		Charging in progress 6,500 W 6,407 W 1,576 Wh
Mode		٩
MANUALLY	-က်ု- AUTOMATIC	OFF
Guarantee minimum charge		
Prioritization		
		STORAGE
Limit maximum energy per cha	rge	

Figure 5. Automatic mode

The priority for charging the vehicle is higher than charging the storage system by default. If the electrical energy storage is to be prioritized higher, this can be changed using the "Prioritization" button.

Important: If the surplus electricity is ...

- less than 6 A, the car will not charge
- greater than the maximum current (32 A), the car is charged with 32 A
- in between, the car is charged with the calculated current



Please note that in a domestic EV-charging park (here: 2x to 3x charging stations or charging points) only 1x electric vehicle can be charged in AUTOMATIC mode. All other charging points can be operated simultaneously in ON (formerly: MANUAL) or OFF mode.



The calculation depends on a 1-phase to 3-phase charging. 6 A corresponds to 1,380 Watts for single-phase charging, 2,760 Watts for two-phase charging and 4,140 Watts for three-phase charging. (6 A * 230 V * phases used)



Furthermore, a minimum charging strength can be configured in automatic mode, at which the vehicle should at least be charged (see figure Minimum charging guarantee).

Electric vehicle	⊟ ⑦ ×
Status Charge target Charging power Energy since start of charging	Charging in progress 6,500 W 6,407 W 1,576 Wh
Mode	٥
MANUALLY AUTOMATIC	OFF
Guarantee minimum charge	-
Min. charging power	6,500 W
4,200 W -	22,100 W
Prioritization	
	STORAGE
Limit maximum energy per charge	

Figure 6. Minimum charging guarantee

This ensures that the vehicle is also charged at night and on days when there is no surplus energy.

 \mathbf{O}

We recommend this setting to still guarantee charging on cloudy days.

Example using the settings in figure Minimum charging guarantee for a car with 11 kW maximum load:

- PV surplus = 4 kW (2.5 kW less than the set minimum of 6.5 kW)
 - It is charged with 6.5 kW. The remaining 2.5 kW is taken from the electrical energy storage system or the grid.
- PV surplus = 10 kW (more than 6.5 kW)
 - The entire PV surplus of 10 kW is charged into the EV. If the storage system were prioritized, only 6.5 kW would also flow into the car as long as the electrical energy storage system is not full.
- PV surplus == 15 kW (> 11 kW)

🕒 FENECON

4.3. Visualization and configuration in Online Monitoring

• It is charged with 11 kW. The remaining 4 kW are used for charging the electrical energy storage system if it is not full.



In both modes, the energy delivered per charging process can be limited (e. g. 20 kWh).



Limiting the amount of energy per charging process is always useful if it is already known in advance that this will be sufficient until the next charging opportunity. For example, on cloudy days when the minimum charging power is guaranteed, excessive use of mains power is prevented or manual termination of charging is unnecessary.

Off

In "Off" mode, the charging station is completely deactivated.

	Electric	vehicle		⊟ @ ×
	Status Charge targe Charging pow			Charging station deactivated 0 W -
	Mode			
		()	-;•;-	Ċ
	MA	NUALLY	AUTOMATIC	OFF
Figure 7. Off				
	1	Charging station		
	Status		Charging	g station deactivated

 \mathbf{O}

We recommend this setting if you wish to block the use of a publicly accessible charging station, for example.

Minimum switching time or hysteresis

To prevent charging interruptions due to starting/pausing the charging process too often, the currently set charging mode is continued for the next few minutes.

Electric vehicle		8	0	×
Status Charge target Charging power		Charge lim		ed W
To avoid charging inter	ne of the charging station ac rruptions due to repeated sta set charging mode will conti	arting/pausing the cha		
Mode				(j
MANUALLY	-┿ָ- AUTOMATIC	U OFF		
Guarantee minimum charge Prioritization			0)
AR CAR		STORAGE		
Limit maximum operau per char	70			

Figure 8. Hysteresis

Navigation bar

Two functions are available in the [fig2:navigation bar]:

- Question mark: The question mark icon takes you to the app's technical instructions.
- Car: The car icon takes you to vehicle management.

Electric vehicle 🛱 🗇 🗡

Figure 9. Navigation bar

You can use the vehicle management function to specify whether a Renault Zoe in particular should be charged at the charging station.

4.3. Visualization and configuration in Online Monitoring


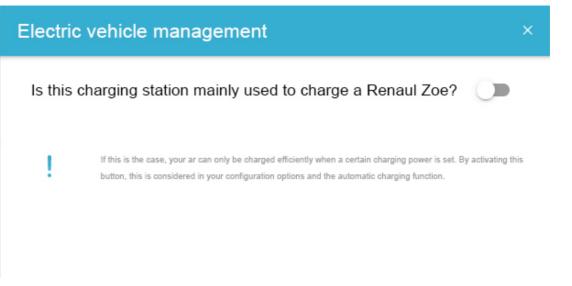


Figure 10. Vehicle management

As soon as this setting is activated, it is no longer possible to make any settings below 10 A (6.9 kW) in either manual or automatic mode. The background to this is that charging the Renault Zoe below 10 A is only possible with poor efficiency.

Electric vehicle		⊜ © ×
Status Charge target Charging power		Cable not connected 0 W -
Mode		0
Ċ	-;o;-	(
MANUALLY	AUTOMATIC	OFF
Max. charging power		22,100 W
6,900 W		• 22,100 W
Limit maximum energy per charge	e	



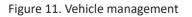

We recommend activating this option if you mainly charge a Renault Zoe at the charging station.

Consumption

You can see the current charging power - together with other consumer loads - in the separate Consumption widget



in Online Monitoring.

Consumption	
Charging station Back-up power consumers	10 kW 0 kW
Other consumption	0.1 kW

Figure 12. Consumption widget

Historic view

• The historical consumption of the charging station is found in the consumption widget. KEBA left 25 20 15 ≷ F 00:00 01:00 02:00 03:00 04:00 05:00 06:00 07:00 08:00 09:00 10:00 11:00 12:00 13:00 14:00 15:00 16:00 Consumption KEBA right 3.5 3.0 2.5 2.0 NN, 1.5 1.0 0.5 00:00 16:00 01:00 02:00 03:00 04:00 07:00 09:00 10:00 11:00 12:00 13:00 14:00 15:00 05:00 06:00 08:00 Co





The app is not suitable for commercial or municipal multi-charging point management. For this purpose, we also offer the "Multi-Charging-Point Management" app.

4.4. FAQ & Troubleshooting

1. With which storage systems from FENECON is the "FEMS App AC/DC charging station" compatible?

4.4. FAQ & Troubleshooting

The app is currently compatible with all current models of the FENECON Home, FENECON Commercial and FENECON Industrial series.

2. Which wallboxes & charging stations are integrated into FENECON energy management system?

Below you will find a list of all compatible wallboxes and charging stations:

Partner	Wallbox (model type)
KEBA GmbH	KEBA KeContact P30 x-series
	KEBA KeContact P30 c-series
	KEBA KeContact company car edition
	KEBA KeContact PV Edition
Hardy Barth GmbH	eCharge Hardy Barth cPµ2 Pro
	eCharge Hardy Barth cPH2 2T22



We currently offer RFID authorization **only** for the KEBA KeContact P30 series. The RFID authorization for the Hardy-Barth eChargers can currently **not** be used with the FENECON Energy Management System.

Partner	Charging stations (model type)
Alpitronic GmbH	Hypercharger HCY50
	Hypercharger HCY150
	Hypercharger HCY300
	Hypercharger HCY400

3. Is a permanent internet connection required?

The charging station must be connected to the FENECON Energy Management System in order to display all required values in Online Monitoring and to be able to set charging limits.

This is usually automatic, as your FEMS and your charging station are set up in the same customer network during installation.



If the FEMS does not have an internet connection, the values can only be viewed and specified via the local monitoring.

If there is no connection, the following text is displayed in the monitoring:



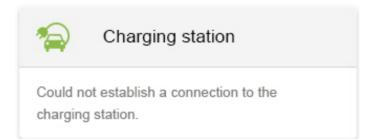


Figure 14. Charging station is not connected

4. Why is my electric vehicle not charging even though there is surplus electricity?

Depending on the connection of the charging station and the car's onboard charger, at least 1,380 W (1) | 2,760 W (2) | 4,140 W (3) of excess power is required so that a default of 6 A can be achieved.

Furthermore, the Renault Zoe can only charge efficiently from 10 A (below this, it charges with very poor efficiency). Charging therefore requires an excess current of 6,900 kW (3). We therefore recommend activating the Renault Zoe limitation mentioned before.

- **5.** Why is the power limit not being adhered to? I.e. the charge controller or charging specification is higher than the actual power charged?
 - Every car charges with different levels of accuracy, and the conversion in the interface from kW to Ampere means that minimal deviations are accepted when the charging command is given.
- 6. Why does FEMS Online Monitoring report "Car full" even though my electric vehicle is not yet fully charged?

The FEMS Online Monitoring estimates the state of charge. This means that if a charging process is started and your electric vehicle does not begin charging within a specified period of time, FEMS Online Monitoring assumes that your electric vehicle has already been fully charged.



The same applies if you have selected MANUAL mode and have defined a charging start time in your wallbox manufacturer's app (e. g. calendar function).

7. Does the FEMS Online Monitoring recognize whether my electric vehicle is charging single-phase or three-phase?

Yes, FEMS Online Monitoring recognizes whether your electric vehicle has a single-phase or three-phase charger. Depending on this, the minimum and maximum values of the charge controller can change in Online Monitoring.

4.5. Further information

- We develop the algorithms and connections used in the "FEMS App DC Charging Station" in cooperation with universities, institutes and other manufacturers of energy management systems in the global OpenEMS community.
 - Find more information about OpenEMS at www.openems.io
 - If you are interested, please feel free to contribute to the discussion in the OpenEMS Community
- From the beginning of 2024, all wallboxes & charging stations in the German private sector must be



4.5. Further information

controllable by the grid operator in accordance with § 14a of the Energy Industry Act. Depending on the manufacturer, your wallbox can be dimmed to the required 4.2 kW charging power and/or switched off for the required period of time. For further information, please contact your wallbox manufacturer.

- KEBA
- Hardy Barth



Currently, the proper dimming of wallboxes & charging stations is not done via the FENECON Energy Management System, but via the solution paths of the wallbox manufacturers.



5. Contact

For support, please contact:

FENECON GmbH Gewerbepark 6 94547 Iggensbach

Phone — Service: +49 (0) 9903 6280 0 E-Mail — Service: service@fenecon.de

6. Directories

6.1. List of illustrations

Figure 1. Flat widget Figure 2. Consumption widget Figure 3. Detail widget Figure 4. Manual mode Figure 5. Automatic mode Figure 6. Minimum charging guarantee Figure 7. Off Figure 8. Hysteresis Figure 9. Navigation bar Figure 10. Vehicle management Figure 11. Vehicle management Figure 12. Consumption widget Figure 13. Historic representation Figure 14. Charging station is not connected



FENECON